

SPECIALTYTOOLS.COM

YOUR **ONE STOP TOOL SOURCE**

CATALOG




**Axiom Ltd.
Presents
The Uniform Axiom 25™ Caulk Line**

Items Required:

- Axiom 25™ Translucent Silicone
- Caulk Gun
- Spray Bottle containing Denatured Alcohol
- Square Laminate Chips with One Corner Rounded over
- Rags and/or Paper Towels


Step #1:

Take a laminate chip with square corners and round over one corner to the desired size of the cove you want to create in the caulk. (Have several handy.)

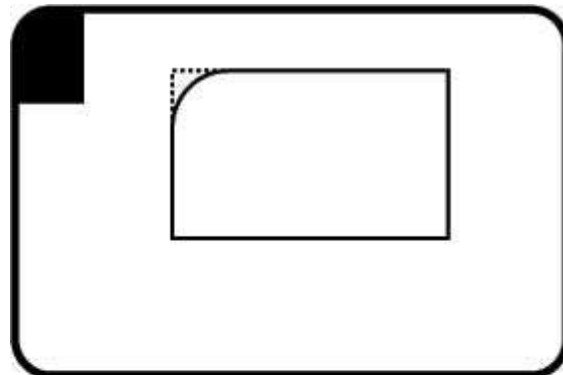


Step #2:

Start with a clean edge or seam. Using Axiom 25™ translucent silicone, caulk your edge to the smallest bead desired.


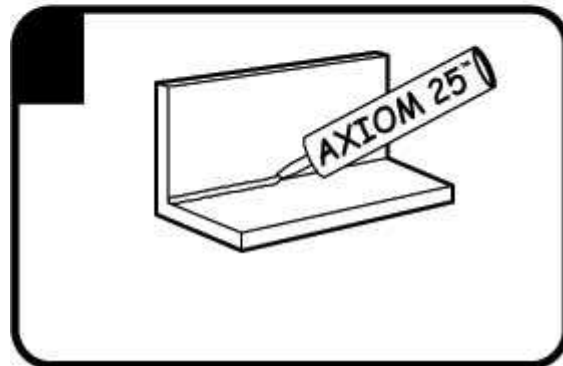


Step #3:


Spray caulk line with denatured alcohol. (This will slow the curing process of the silicone and keep excess silicone from adhering to other areas of the material.)

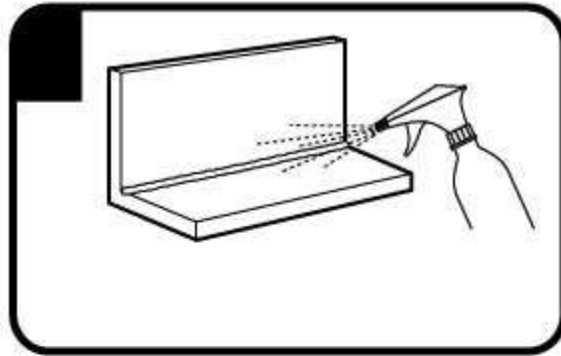**Step #4:**

Take a rag or paper towel in one hand and hold the laminate chip in the other. Place the rounded corner in the caulk having the straight sides of the laminate chip against the back and base of countertop.

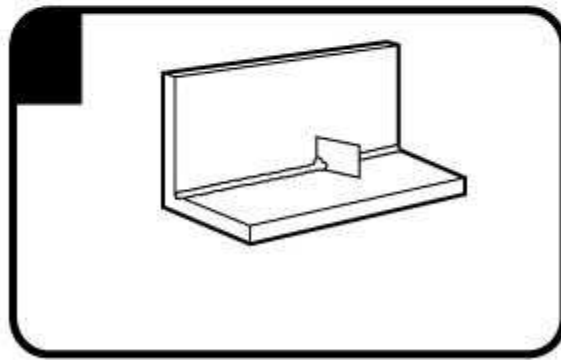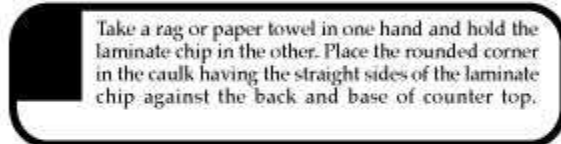**Step #5:**

Pull the laminate chip along the caulk line in one direction. At 6" - 10" or when excess caulk builds up on chip, whip excess off into rag or paper towel.

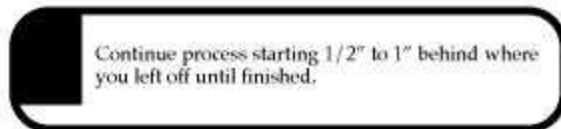

Step #6:

Continue process starting ½" to 1" behind where you left off until finished.

Results:

A uniform caulk line with no mess.



1.800.669.5519 Fax 1.800.660.7371 [Catalog Home](#)