

SPECIALTYTOOLS.COM


YOUR **ONE STOP TOOL SOURCE**

CATALOG 

Click thumbnail for larger version



Tracing template to scribe back edge of deck to wall for cove back splash

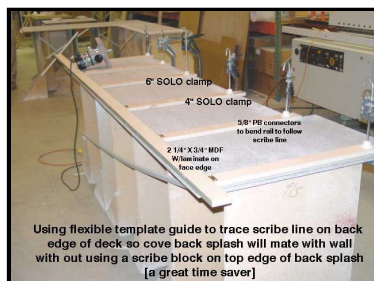

Using flexible template guide to trace scribe line on back edge of deck so cove back splash will mate with wall with out using a scribe block on top edge of back splash [a great time saver]



Showing fabricated scribe and rabbet joint for cove shoe



32" wide top using DS8 clamps to clamp cove shoe with DRK deck rails and CD6 clamps to clamp backsplash



scribed cove back splash




Cove stop block



inside radius cove corner mitered



Use Dani clamps to align MDF template before clamping with Solo or bar clamps, then router end of cove backsplash flush with deck seam using top bearing bit

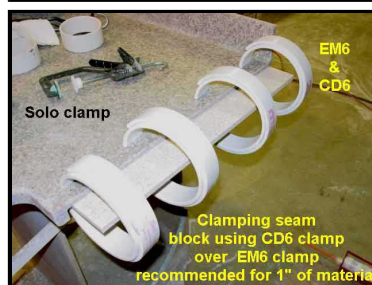

Clamping seam block using CD6 clamp over EM6 clamp recommended for 1" of material



Clamping seam block & deck seam



Mini sanding wheels for sanding inside cove corner, sink rims, or small radius. 180g X 5/8" & 3/4" - 320g X 5/8" & 3/4" MSWH set [4 sanding wheels]

SPECIALTYTOOLS.COM

1.800.669.5519 Fax 1.800.660.7371

Catalog Home